

# greenworks®

**SS60L41**  
**SS60L25**  
**SS60L02**

EN

SNOW SHOVEL

OPERATOR MANUAL

FR


PELLE À NEIGE

MANUEL D'OPÉRATEUR

ES

QUITANIEVES

MANUAL DEL OPERADOR

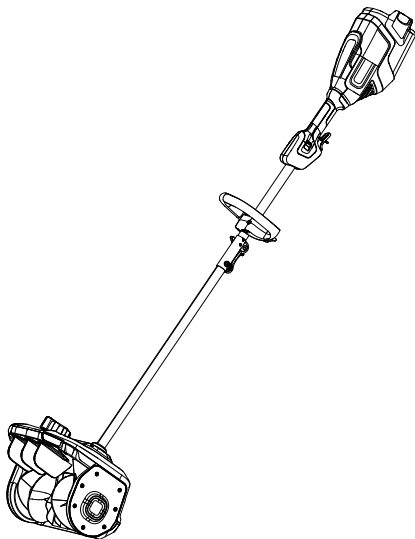

[www.greenworkstools.com](http://www.greenworkstools.com)


|          |                                                       |          |           |                                                               |           |
|----------|-------------------------------------------------------|----------|-----------|---------------------------------------------------------------|-----------|
| <b>1</b> | <b>Description.....</b>                               | <b>2</b> | 8.3       | Start the product.....                                        | 7         |
| 1.1      | Purpose.....                                          | 2        | 8.4       | Operate the machine.....                                      | 7         |
| 1.2      | Overview.....                                         | 2        | 8.5       | LED Headlights.....                                           | 7         |
| 1.3      | California Proposition 65.....                        | 2        | 8.6       | Adjust the directional vanes.....                             | 8         |
| <b>2</b> | <b>Safety.....</b>                                    | <b>2</b> | 8.7       | Stop the product.....                                         | 8         |
| 2.1      | Safety definitions.....                               | 2        | 8.8       | Cold weather operation.....                                   | 8         |
| 2.2      | Safe Operation Practices for<br>Product.....          | 2        | 8.9       | Prevent freeze-up after use.....                              | 8         |
| <b>3</b> | <b>Safety features on the<br/>product.....</b>        | <b>4</b> | 8.10      | Recommendations for<br>effective snow throwing.....           | 9         |
| <b>4</b> | <b>Safety instructions for<br/>maintenance.....</b>   | <b>4</b> | <b>9</b>  | <b>Maintenance.....</b>                                       | <b>9</b>  |
| <b>5</b> | <b>Symbols on the product.....</b>                    | <b>4</b> | 9.1       | General maintenance.....                                      | 9         |
| <b>6</b> | <b>Environmentally safe<br/>battery disposal.....</b> | <b>5</b> | 9.2       | Replace the scraper.....                                      | 9         |
| <b>7</b> | <b>Installation.....</b>                              | <b>5</b> | 9.3       | Replace the impeller.....                                     | 10        |
| 7.1      | Unpack the product.....                               | 5        | <b>10</b> | <b>Transportation, storage,<br/>and disposal.....</b>         | <b>12</b> |
| 7.2      | Attach the shaft.....                                 | 6        | 10.1      | Transportation.....                                           | 12        |
| 7.3      | Attach the auxiliary handle.....                      | 6        | 10.2      | Disposal of the battery,<br>battery charger, and product..... | 12        |
| <b>8</b> | <b>Operation.....</b>                                 | <b>6</b> | <b>11</b> | <b>Troubleshooting.....</b>                                   | <b>13</b> |
| 8.1      | Before using the product.....                         | 6        | <b>12</b> | <b>Technical data.....</b>                                    | <b>13</b> |
| 8.2      | Connect the battery to the<br>product.....            | 7        | <b>13</b> | <b>Limited warranty.....</b>                                  | <b>13</b> |
|          |                                                       |          | 13.1      | Items not covered by warranty.....                            | 13        |
|          |                                                       |          | 13.2      | Helpline.....                                                 | 14        |
|          |                                                       |          | 13.3      | Shipping.....                                                 | 14        |

## 1 DESCRIPTION

### 1.1 PURPOSE

This machine is used to remove and clear away snow from sidewalks, driveways and other paved ground-level surfaces.

### 1.2 OVERVIEW

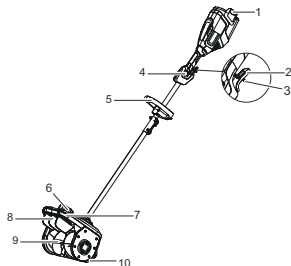

- 1 Battery release button
- 2 Trigger
- 3 Safety-lock lever
- 4 Speed switch
- 5 Auxiliary handle
- 6 Directional vane adjustment knob
- 7 LED light
- 8 Directional vanes
- 9 Impeller
- 10 Scraper

### 1.3 CALIFORNIA PROPOSITION 65

#### ⚠ WARNING

**THIS PRODUCT CONTAINS OR EMITS A CHEMICAL KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER OR BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM.**

## 2 SAFETY

### 2.1 SAFETY DEFINITIONS

Warnings, cautions, and notes are used to point out especially important parts of the manual.

#### ⚠ WARNING

**THERE IS A RISK OF INJURY OR DEATH FOR THE OPERATOR OR BYSTANDERS IF THE INSTRUCTIONS IN THE MANUAL ARE NOT OBEYED.**

#### ⚠ CAUTION

**THERE IS A RISK OF DAMAGE TO THE PRODUCT, OTHER MATERIALS, OR THE ADJACENT AREA, IF THE INSTRUCTIONS IN THE MANUAL ARE NOT OBEYED.**

*Note: Used to give more information that is necessary in a given situation.*

### 2.2 SAFE OPERATION PRACTICES FOR PRODUCT

#### ⚠ DANGER

**This product has the potential to cause severe injury, including amputation of hands and feet, as well as the ejection of objects. Failure to adhere to the following safety instructions may lead to serious harm.**

#### 2.2.1 BATTERY TOOLS USE AND CARE

#### ⚠ WARNING

Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the product. Avoid carrying the product with your finger on the switch or powering it with your finger on the switch, as this can lead to accidents.
- Disconnect the battery pack from the product before making any adjustments, changing accessories, or storing product. Such preventive safety measures reduce the risk of starting the product accidentally.
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Avoid contact with liquid that may be ejected from the battery under abusive conditions. If contact occurs, flush with water and seek medical help if it gets into the eyes. Ejected liquid from the battery can cause irritation or burns.

- Do not use a battery pack or product that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.
- Do not expose a battery pack or product to fire or excessive temperature. Temperatures above 265 °F (130 °C) can cause explosion.
- Follow all charging instructions and do not charge the battery pack or product outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- For service or repairs, consult your nearest service center that will use identical replacement parts to ensure the safety of the product.
- Do not modify or attempt to repair the product or the battery pack (as applicable) except as indicated in the instructions for use and care.

## 2.2.2 FOR ALL PRODUCTS

- Do not use on graveled surfaces unless the product is adjusted for such a surface in accordance with the operator's manual.
- Keep children away - Children and bystanders should remain at a safe distance while operating the product.
- Dress Appropriately - Avoid wearing loose clothing or jewelry that can get caught in moving parts. It is recommended to wear protective footwear when using this product.
- Operation of the product in the hand-held position is unsafe, except in accordance with the special instructions for such use provided in the operator's manual.
- Keep hands away from moving parts.
- Keep guards in place and in working order.
- Avoid Overexerting the Product - The product performs better and safer when operated at its designated rate.
- Don't Overreach – Keep proper footing and balance at all times
- If the product strikes a foreign object follow these steps:
  1. Stop the product. Release the switch.
  2. Remove the battery pack.
  3. Inspect for damage.
  4. Repair any damage before restarting and operating the product.
- Disconnect Product– Disconnect the product from the battery pack when not in use, before servicing, or changing accessories.
- Store Idle Product Indoors – When not in use, products should be stored indoors in dry, locked-up place – out of reach of children.

- Maintain Products With Care – Follow instructions for lubricating and changing accessories.

## 2.2.3 TRAINING

- Read the operating and service instruction manual carefully. Be thoroughly familiar with the controls and the proper use of the product. Know how to stop the product and disengage the controls quickly.
- Ensure that only trained individuals operate the product, and never allow children to use it.
- Keep a clear area of operation, free from any individuals, especially small children and pets.
- Exercise caution to avoid slipping or falling, especially when operating in reverse.

## 2.2.4 PREPARATION

- Thoroughly inspect the area where the product is to be used and remove all doormats, sleds, boards, wires, and other foreign objects.
- Do not operate the product without wearing adequate winter garments. Wear protective footwear to improve footing on slippery surfaces.
- Adjust the collector housing height to clear gravel or crushed rock surface.
- Never attempt to make any adjustments while the product is running (except where specifically recommended by manufacturer).
- Always wear safety glasses or eye shields during operation or while making adjustments or repairs to protect eyes from foreign objects that may be thrown from the product.

## 2.2.5 OPERATION

- Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times.
- Exercise extreme caution when operating on or crossing gravel drives, walks, or roads. Stay alert for hidden hazards or traffic.
- If the product strikes a foreign object, turn the product off, remove the battery pack, and then inspect it for damage. Repair any damage before restarting and using the product.
- If the product should start to vibrate abnormally, stop the product and carefully inspect it. Vibration is generally a sign of trouble.
- Power off the product whenever you leave the operating position, before unclogging the auger housing or discharge guide, and when making any repairs, adjustments, or inspections.
- When cleaning, repairing, or inspecting, make certain the auger and all moving parts have stopped moving.
- Exercise extreme caution when operating on slopes.

- Never operate the product without proper guards, and other safety protective devices in place and in working order.
- Never direct the discharge toward people or areas where property damage can occur. Keep children and others away.
- Do not overload the product capacity by attempting to clear snow too quickly.
- Never operate the product at high transport speeds on slippery surfaces. Exercise caution when reversing.
- Make sure to power off when the product is transported or not in use.
- Use only attachments and accessories approved by the manufacturer (such as wheel weights, counterweights, or cabs).
- Never operate the product without good visibility or light. Always be sure of your footing, and keep a firm hold on the handles. Walk, don't run.
- Never use your body parts to clear the discharge chute.
- Sudden contact with the rotating auger inside the discharge chute is the most common cause of injury associated with products. Never use your hand to clean out the discharge chute.

To clear the chute:

1. SHUT THE PRODUCT OFF!
2. Wait 10 seconds to be sure the auger has stopped rotating.
3. Always use a clean-out tool, not your hands.

## 2.2.6 MAINTENANCE AND STORAGE

- Check shear bolts and other bolts before and after every use for proper tightness to be sure the product is in safe working condition.
- Always refer to owner's guide instructions for important details if the product is stored for an extended period.
- Maintain or replace safety and instructions labels, as necessary.
- Run the product a few minutes after throwing snow to prevent freeze-up of the auger.

## 2.2.7 RECOMMENDED AMBIENT TEMPERATURE RANGES:

| Situation         | Temperature                   |
|-------------------|-------------------------------|
| Product storage   | 1.4°F (-17°C) ~ 113 °F (45°C) |
| Product operation | 1.4°F (-17°C) ~ 113 °F (45°C) |
| Battery charging  | 39°F (4°C) ~ 104 °F (40°C)    |
| Charger operation | 39°F (4°C) ~ 104 °F (40°C)    |

| Situation           | Temperature                   |
|---------------------|-------------------------------|
| Battery discharging | 1.4°F (-17°C) ~ 113 °F (45°C) |
| Battery storage     | 32°F (0°C) ~ 113 °F (45°C)    |

## 3 SAFETY FEATURES ON THE PRODUCT



WARNING

**CAREFULLY READ AND UNDERSTAND THE SAFETY PRECAUTIONS BELOW BEFORE USING THE PRODUCT.**

- Ensure that the safety hardware on the product is functioning properly before use.
- Regularly inspect the safety hardware, and if any defects are found, please contact your nearest service center immediately.

## 4 SAFETY INSTRUCTIONS FOR MAINTENANCE

- Make sure to stop the motor before you do any maintenance on the product.
- Wear protective gloves when doing any auger maintenance.
- Only use accessories that have been approved by the manufacturer. Do not modify the product in any way. Using unofficial or third-party accessories can result in serious injury or death.
- Failure to perform maintenance correctly and regularly increases the risk of injury and damage to the product.
- Only carry out maintenance tasks as outlined in the operator's manual. All other servicing should be performed by an authorized service center.
- Regular servicing of the product should be carried out by an approved service center.
- Replace any damaged, worn, or broken parts promptly to maintain the safety and functionality of the product.

## Save these instructions

## 5 SYMBOLS ON THE PRODUCT

Some of the following symbols may be used on this tool. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the tool better and safer.

| Symbol | Explanation                                                                                                         |
|--------|---------------------------------------------------------------------------------------------------------------------|
|        | Direct current                                                                                                      |
|        | Precautions that involve your safety.                                                                               |
|        | Read and understand all instructions before operating the product, and follow all warnings and safety instructions. |
|        | Keep hands away from the discharge area.                                                                            |
|        | Keep feet out of impeller. Keep feet away from rotating impeller.                                                   |
|        | Do not stare at operating lamp.                                                                                     |

## 6 ENVIRONMENTALLY SAFE BATTERY DISPOSAL



The toxic and corrosive materials below are in the batteries used in this product: **Lithium-ion, a toxic material.**

### WARNING

Discard all toxic materials in a specified manner to prevent contamination of the environment. Before discarding damaged or worn-out Lithium-ion batteries, contact your local waste disposal agency, or the local Environmental Protection Agency for information and specific instructions. Take the batteries to a local recycling and/or disposal center, certified for Lithium-ion disposal.

### WARNING

If the battery cracks or breaks, with or without leaks, do not recharge it and do not use. Discard it and replace with a new battery. **DO NOT TRY TO REPAIR IT!** To prevent injury and risk of fire, explosion, or electric shock, and to avoid damage to the environment:

- Cover the terminals of the battery with heavy-duty adhesive tape.
- **DO NOT** try to remove or destroy any of the battery components.
- **DO NOT** try to open the battery.
- If a leak develops, the released electrolytes are corrosive and toxic. **DO NOT** get the solution in the eyes or on skin, and do not swallow it.
- **DO NOT** put these batteries in your regular household trash.
- **DO NOT** incinerate.
- **DO NOT** put them where they will become part of any waste landfill or municipal solid waste stream.
- Take them to a certified recycling or disposal center.

## 7 INSTALLATION

### WARNING

Do not change or make accessories that are not recommended by the manufacturer.

### WARNING

Do not install the battery pack until you assemble all the parts.

### 7.1 UNPACK THE PRODUCT

#### WARNING

**MAKE SURE THAT YOU CORRECTLY ASSEMBLE THE PRODUCT BEFORE USE.**

#### WARNING

- **IF PARTS OF THE PRODUCT ARE DAMAGED, DO NOT USE THE PRODUCT.**
- **IF PARTS ARE MISSING, DO NOT OPERATE THE PRODUCT.**
- **IF PARTS ARE DAMAGED OR MISSING, CONTACT THE SERVICE CENTER.**

1. Open the package.
2. Read the documentation provided in the box.
3. Remove all the unassembled parts from the box.

- Remove the product from the box.
- Discard the box and packing material in compliance with local regulations.

**⚠ WARNING**


**FOR YOUR PERSONAL SAFETY, DO NOT POWER ON BEFORE THE PRODUCT IS ASSEMBLED COMPLETELY.**

## 7.2 ATTACH THE SHAFT


**i NOTE**

If the button does not release fully in the location hole, the shafts are not locked into position. Turn from side to side until the button is locked into position.

- Loosen the lock knob on the coupler.
- Align the release button with the location hole and move the two shafts together.

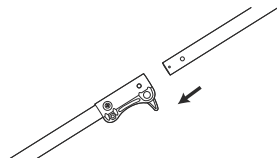


- Turn the upper shaft until the release button locks into the location hole.
- Tighten the lock knob.

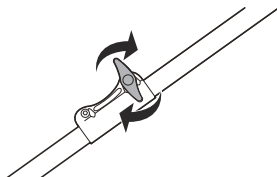


## 7.3 ATTACH THE AUXILIARY HANDLE

- Push the auxiliary handle onto the shaft.

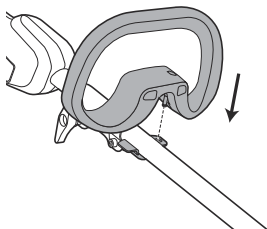

- Set the auxiliary handle in the comfortable position.
- Tighten the auxiliary handle with the knob.

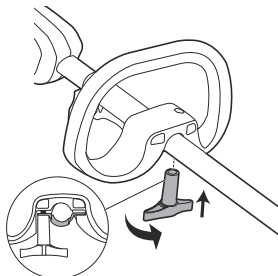

## 8 OPERATION

This section describes how to operate the product.

**⚠ WARNING**

**CAREFULLY READ AND UNDERSTAND THE SAFETY CHAPTER AND OPERATION INSTRUCTIONS BEFORE YOU OPERATE THE PRODUCT.**

### 8.1 BEFORE USING THE PRODUCT

#### 8.1.1 CONNECT THE BATTERY CHARGER

Connect the battery charger to the proper voltage and frequency that is specified on the rating plate.

Refer to the Battery & Charger Manual for information about how to use the battery charger.

## 8.1.2 CHARGE THE BATTERY

Refer to the Battery Charger Operator Manual for information about how to use the battery charger.

## 8.1.3 BATTERY INFORMATION

Refer to the Battery Operator Manual for information about how to use the battery.


## 8.2 CONNECT THE BATTERY TO THE PRODUCT



### WARNING

**ONLY USE THE ORIGINAL BATTERY WITH THE PRODUCT.**

1. Make sure that the battery is fully charged.
2. Push the battery into the battery compartment. The battery locks into position when you hear a click.

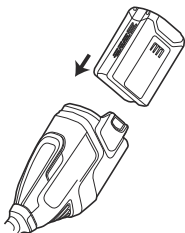

### CAUTION

**IF THE BATTERY DOES NOT FIT EASILY INTO THE BATTERY HOLDER, IT MAY NOT BE INSTALLED CORRECTLY, WHICH CAN CAUSE DAMAGE TO THE BATTERY AND/OR THE PRODUCT.**

3. Make sure that the battery is installed securely.

## 8.3 START THE PRODUCT



### WARNING


Examine the work area. Remove all stones, sticks, wire, bones, and other debris that can ricochet because of the rotating impeller.




### NOTE

If it is possible, clear the snow in the direction of the wind.

1. Simultaneously push the safety-lock lever (1) and pull the trigger (2).

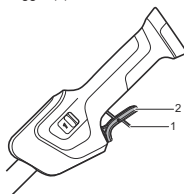

2. Adjust the speed according to the snow condition by sliding the speed switch.

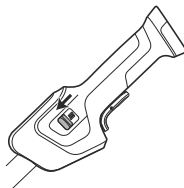

## 8.4 OPERATE THE MACHINE

1. Start the machine.
2. Push the machine forward until it rides on the scraper.




### NOTE

The forward speed is dependent on the depth and weight of the snow.


## 8.5 LED HEADLIGHTS

1. The LED headlights will automatically power on when the product is turned on and power off when the product is turned off.

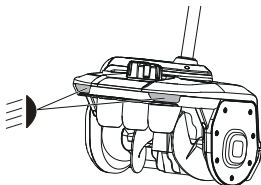


### 8.6 ADJUST THE DIRECTIONAL VANES

**Note :** The directional vanes can be adjusted 60° to alter the snow throwing direction.

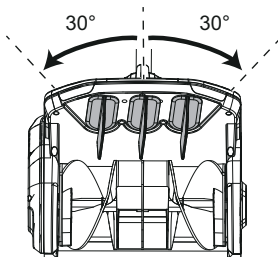


1. Rotate the adjustment knob to change the direction of snow throwing.

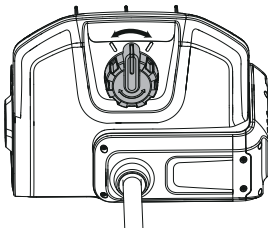

### 8.7 STOP THE PRODUCT

1. Release the trigger.
2. Push the battery release button and pull out the battery to fully stop its operation.

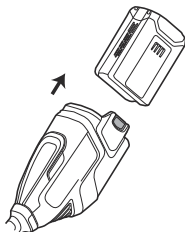

#### ⚠ WARNING

**WAIT UNTIL THE MOTOR STOPS BEFORE YOU REMOVE THE BATTERY.**

### 8.8 COLD WEATHER OPERATION

The safe battery operation temperature ranges from 1°F (-17°C) to 113°F (45°C).

#### ⚠ WARNING

**DO NOT STORE OR CHARGE BATTERY OUTSIDE.**

Battery must be charged and stored indoors before using the product.

If the product does not start:

1. Remove the battery from the product.
2. Charge the battery for up to 15 minutes in a warm area, or until the charging light turns green.
3. Reinstall the battery in the unit.

### 8.9 PREVENT FREEZE-UP AFTER USE

**Note:** Controls and moving parts may become obstructed by ice. Avoid applying excessive force to the controls. If a control or part becomes unresponsive, start the motor and allow it to run for a few minutes.

- Start the motor and let it run for a few minutes. Stop the engine and wait for all moving parts to come to a complete stop.
- Remove snow and loose ice from the product exterior and base of the discharge chute.
- Rotate the chute deflector to the left and right to remove ice and water.
- Press the safety switch button.

## 8.10 RECOMMENDATIONS FOR EFFECTIVE SNOW THROWING

- Adjust the speed of the product according to the snow conditions using the drive speed control lever. Ensure that the product evenly throws snow.
- It is recommended to remove snow promptly after it falls for easier and more efficient clearing.
- Whenever possible, throw snow downwind for optimal results.
- The scraper bar can be replaced when it becomes worn almost to the edge of the housing. Replace the scraper bar if it is damaged or worn on both sides.
- Avoid operating the chute deflector if it is clogged.
- In the event that the product does not move forward due to unforeseen circumstances, immediately release the bail lever or press the safety switch button to stop the product.

## 9 MAINTENANCE

### ⚠ WARNING

Remove the battery pack from the machine before maintenance.

### ⚠ WARNING

Wear correct clothing, gloves and safety glasses before maintenance.

### ⚠ CAUTION

Use only approved replacement parts.

### ⚠ CAUTION

Do not let brake fluids, gasoline, petroleum-based materials touch the plastic parts. Chemicals can cause damage to the plastic, and make the plastic unserviceable.

### ⚠ CAUTION


Do not use strong solvents or detergents on the plastic housing or components.

## 9.1 GENERAL MAINTENANCE



- Before each use, examine the machine for damaged, missing, or loose parts such as screws, nuts, bolts and caps.
- Tighten all the fasteners and caps correctly.
- Clean the remaining snow on the machine with a brush.

## 9.2 REPLACE THE SCRAPER


1. Place the product on a flat, level surface.
2. Remove the 5 screws below the impeller that attach the scraper to the product.

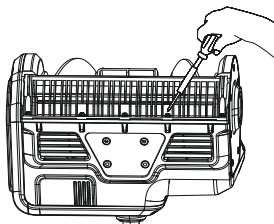

3. Remove 1 screw on the left side cover. Also, remove 1 screw on the right side cover.

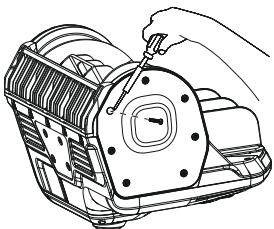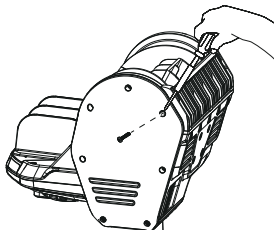


4. Remove the worn scraper.

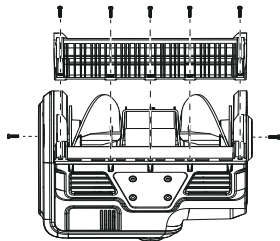


5. Install the new scraper.
6. Insert and securely tighten the 7 screws.

### 9.3 REPLACE THE IMPELLER


1. Remove the 7 screws on the right side cover.

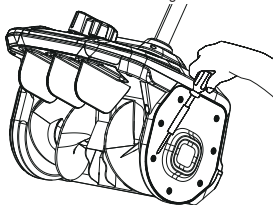


2. Remove the nut on the right side plate.

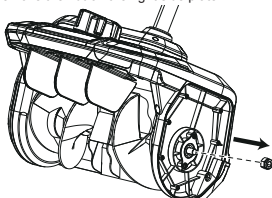


3. Remove the 7 screws on the left side cover.

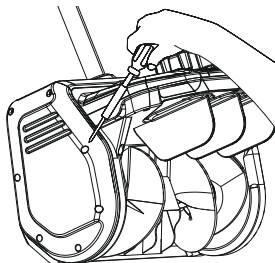


4. Pull the belt tensioner away from the engine pulley. Do not lose or misplace the washer, spring and screw.

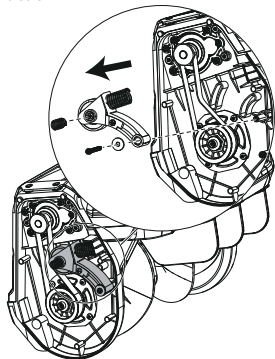


5. Remove the belt.

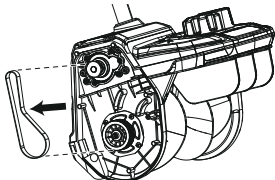


6. Remove the 4 screws that secure the fixed plate.

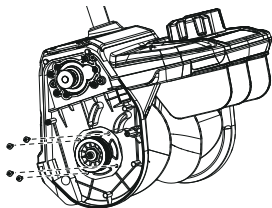


7. Remove the impeller shaft, pulley assembly and fixed plate together.

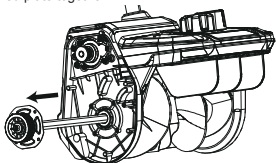



8. Remove the damaged impeller. Do not lose or misplace the small shaft sleeve from the right side of the shaft.

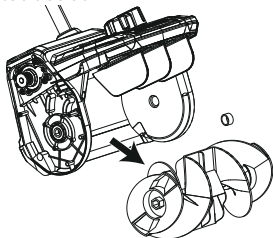


9. Insert the impeller shaft, pulley assembly and the fixed plate through the new impeller. Make sure to install the small shaft sleeve on the right side of the shaft.

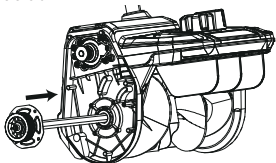


10. Mount and securely tighten the nut on the right side plate assembly. Mount the right side cover, then insert and securely tighten the 7 screws.

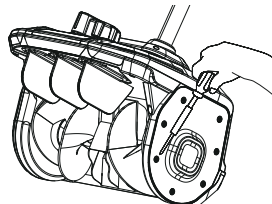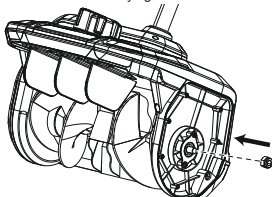


11. Insert and securely tighten the 4 screws on the fixed plate.

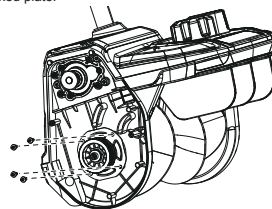


12. Install the belt and the belt tensioner.

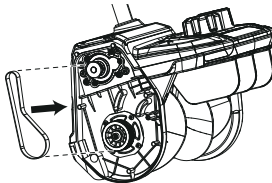

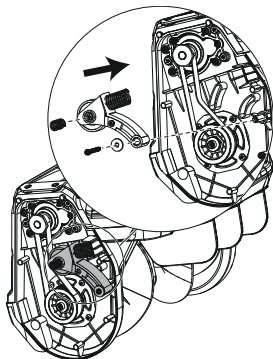

13. Insert and securely tighten the 7 screws on the left side cover.

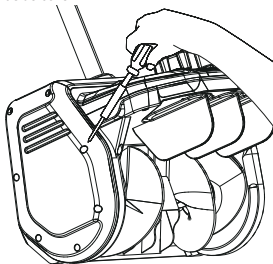

## 10 TRANSPORTATION, STORAGE, AND DISPOSAL

### 10.1 TRANSPORTATION

- Any removable (electronic) parts, such as the charger and battery, should always be disconnected before transport.
- Avoid transporting the product in bad weather conditions.
- Make sure to adequately cover any exposed electronic parts if transportation in adverse weather conditions is unavoidable.
- Use tape on open contacts of the battery and ensure it is securely stowed to prevent movement.
- High speeds, along with wind and rain, may force moisture into the electronic components, which

can lead to temporary malfunctions or permanent defects.

- In case of malfunction occurring after transport in such conditions, remove the battery and allow all parts to air-dry when you reach your destination.

### 10.2 DISPOSAL OF THE BATTERY, BATTERY CHARGER, AND PRODUCT

Symbols on the product or the package of the product mean that the product is not domestic waste. Recycle it at a recycling station for electrical and electronic equipment. This helps to prevent damage to the environment and persons.

Get in touch with your local authorities, domestic waste service, or your dealer for more information about how to recycle your product.

## 11 TROUBLESHOOTING

| Problem                                            | Possible cause                              | Solution                                                                                                                                                                                          |
|----------------------------------------------------|---------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The handle is not in position.                     | The bolts are not engaged correctly.        | Adjust the height of the handle and make sure that the knobs and bolts are aligned correctly.                                                                                                     |
| The machine does not start.                        | The battery is not charged.                 | Charge the battery by following the procedures in the battery and charger manual.                                                                                                                 |
|                                                    | The switch is defective.                    | Have the switch replaced by an authorized service center.                                                                                                                                         |
|                                                    | Battery is too cold.                        | Remove battery from the snow shovel. Place battery on charger and allow to charge for 10 minutes or until the changing light turns green. Remove from charger and install in snow shovel for use. |
|                                                    | Battery may require service or replacement. | Please contact the authorized after-sales service center.                                                                                                                                         |
| The product is on, but the impeller does not turn. | The belt is damaged.                        | Replace the belt.                                                                                                                                                                                 |
| A thin layer of snow stays behind.                 | The scraper bar is damaged.                 | Replace the scraper bar.                                                                                                                                                                          |

\* If you cannot find the solution to these problems, please contact the authorized after-sales service center.

## 12 TECHNICAL DATA

|                    |                                                                                        |
|--------------------|----------------------------------------------------------------------------------------|
| Voltage            | 60 V  |
| Weight (tool only) | 7 kg (15.4 lbs)                                                                        |
| No load speed      | 1500 / 1800 RPM                                                                        |
| Clearing width     | 12 in (30 cm)                                                                          |
| Clearing depth     | 8 in. (20 cm)                                                                          |
| Impeller size      | 11 in (27.8 cm)                                                                        |
| Battery            | LB6042/LB60251 and other BAC series                                                    |
| Charger            | CAA801 and other CAC series                                                            |

## 13 LIMITED WARRANTY

products and batteries are protected against all defects in materials, parts, or workmanship under normal use for a period of 4 years from the shipping date or in-store purchase date.

At its own discretion, can opt to repair, replace, substitute with a comparable item, or issue a refund for products that are determined to be defective through normal use or that have been damaged during shipment. Proof of purchase and product registration is required. Replacement of products or parts subject to normal wear and tear is the responsibility of the customer.

This warranty is valid only for units which have been maintained in accordance with the instructions found in the operator manual supplied with the product; and for units which have been registered in one of the following ways:

Online: [www.greenworkstools.com](http://www.greenworkstools.com)

Phone – 1-855-345-3934

If accepts a return under warranty, you can return the defective or damaged product only after you call our Customer Care team and receive a Return Authorization from . You will also receive a refund for your original shipping charges, and will arrange and pay for your return shipping charges. To request a Return Authorization, please contact us at 1-855-345-3934.

## 13.1 ITEMS NOT COVERED BY WARRANTY

- Any part that has become inoperative due to misuse, commercial use, abuse, neglect, accident, improper maintenance, or alteration.
- The unit, if it has not been operated and/or maintained in accordance with the operator manual.
- Normal wear, except as noted below:

- Routine maintenance items such as lubricants.
- Normal deterioration of the exterior finish due to use or exposure.
- Any part/product, that has become inoperable due to use with any non--branded parts or batteries/chargers.

### 13.2 HELPLINE

Warranty service is available by calling our toll-free helpline at: 1-855-345-3934.

### 13.3 SHIPPING

Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. It is the purchaser's responsibility to pay transportation charges for any part submitted for replacement under this warranty unless such return is requested in writing by .

#### 13.3.1 ADDRESS

**USA address:**

North America, LLC

P.O. Box 1238 , Mooresville, NC 28115, USA

**Canada address:**

Tools Canada, Inc.

67 Toll Rd., Holland Landing, ON L9N 1H2

**Mexico address:**

TECNOLOGIA CAMPO Y JARDIN S.A. DE C.V.

ADMINISTRADORES No. 5336 A, COL. ARCOS DE

GUADALUPE, ZAPOPAN , JALISCO , C.P. 45037

# greenworks®

[www.greenworkstools.com](http://www.greenworkstools.com)



P0806921-00